If you want to use the low flame of the inner ring, turn the control knob as shown in (4). If the flames become yellowish, adjust the gas and air mixture control to produce











10. After use always turn OFF the regulator/valve of the gas tank.









**FIRE PREVENTION TIPS IN USING GAS STOVE:** 

- Install gas tank in an open air (clear air).
- After every use, close the regulator/valve of the gas tank in order to minimize the remaining gas pressure in the hose.
- Always check for any leakage. Rub the hose and all the connection point, by using soap and water. If bubble appears, close the regulator/valve immediately and call an authorized technician.
- If leakage occurs, open the windows and door to release gas. Do not turn on any electrical appliances as this may cause to start the fire.
- We recommend changing the hose and the regulator every 1 year.

#### **GAS EFFICIENCY TIPS:**

- Use a clean flat pot for an even heat distribution, so that the food will be cooked fast
- Prepare all ingredients before cooking in order to save gas.

#### **CLEANING AND MAINTENANCE:**

- Always clean the gas stove after every use.
- Allow the unit to cool before cleaning.
- 3. Lift the burners and wipe the surface of the gas stove with damp cloth.
- Do not use abrasive materials to avoid scratches.


REMINDER: Please do not forget to register your product warranty through the warranty registration website at https://imarflex.ph



Distributed By: Topgadget Distributions, Inc. 2120 A.linao St., Malate, Manila Made in China

# **©** imarflex<sub>®</sub>

## 2in1 GAS STOVE COUNTERTOP / BUILT-IN

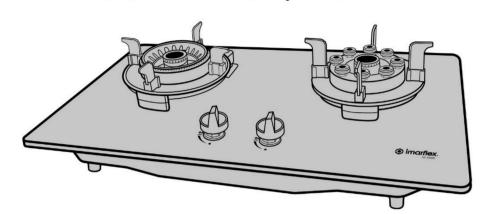







Adjustable Air/Gas Mixture



Stainless Steel Panel



**Battery Operated** 

Low Gas Consumption

**Easy-lift Burners** for éasy cleaning

- Safety Lock Feature
- 10kg Max Capacity
- 2-year laniter Warranty

FOR HOUSEHOLD USE ONLY

IG-388BL

#### **SPECIFICATION:**


IG-388BL MODEL NO .: GAS TYPE: **LPG** GAS PRESSURE (Pa): 2800Pa HEAT LOAD (kW):

Left Burner: 4.8kW Right Burner: 5.0kW **IGNITER BATTERY SIZE: D** Battery **BOX DIMENSION:** 795\*490\*215mm **UNIT DIMENSION:** 750\*440\*205mm **GROSS WEIGHT:** 7.9kg. **UNIT WEIGHT:** 6.4kg.

#### **IMPORTANT SAFEGUARDS:**


- Read all instruction carefully before use.
- Before using the unit, always check the hose and regulator to avoid leakage.
- Put the unit in stable surface and keep it away from the edge of the counter to avoid accident.
- Keep curtains, furniture, appliances, flammable materials, etc. away from the unit.
- 5. Children should be supervised to ensure that they do not play with the appliance.
- This appliance is not intended for use by person (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning ise of the appliances by a r
- Do not use gas other than LPG.
- This appliance is designed for cooking and not intended for any other purpose.
- If you notice that the flame is not normal or you smell gas leakage, turn OFF the unit and bring it to the nearest Authorized Service Center.
- Do not use this unit for outdoor use.
- Do not use this unit other than its intended use.
- For household use only.
- 13. Save this instruction manual for future reference.

### **DESCRIPTION OF PARTS:**

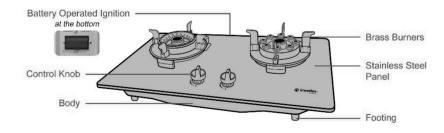

#### **INSTALLATION:**

- Cut a hole on the fireplace board according to the size of the unit.
- Remain a free room over 40cm below the bottom of the stove and keep a safe space more than 15cm around the stove.
- For the installation of the built-in gas stove, a ventilating hole more than 100 square centimeters should be made under the stove or in a place where it is easy to have ventilation to ensure that there is air coming to the bottom of the stove.
- When in use, avoid opening the door of the fireplace to avoid fire off or fire-back caused by the sudden air change.
- The distance between the stove and the gas bottle should be more than 0.5m, the suitable length of the gas stove is about 1m and the gas bottle must not be laid under

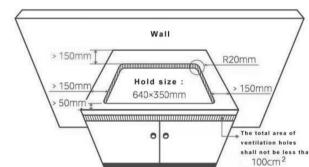

- Check all parts of the gas stove, including the following
  - Control knob (2pcs)
  - 4pcs. footing
- Clean the interface of gas-in, then connect it to the joining part and tighten it with a hose clip.
- Connect 3/8" or 9.5mm hose at the gas stove inlet pipe and the other end in the regulator/valve.
- Check the joining with soap water to see for any leakage of gas.
- Do not forget to put Type AA Battery at the bottom of
  - This is electronic ignition a battery-operated ignition.
  - Battery not included in the packaging.
  - Place the gas stove away from the wall or ceiling. (See figure 3.)



#### **HOW TO USE:**

- Make sure that the control knob is in OFF position.
- Open the regulator/valve of the gas tank. (pull or twist)
- Push the control knob and turn it counter clockwise until click sound is heard. The flame will ignite automatically. If ignition fails due to faulty gas flow, turn the control knob back to OFF position and
- repeat instruction #3.
- If you want to use both rings with high flame, turn the control knob as shown in (1).
- If you want to use both rings with medium flame, turn the control knob as shown in (2). If you want to use the medium flame of the inner ring, turn the control knob as shown