



SLOW COOKER

Locks the juice and nutrients of food inside



6.0 qt.
5.6L CAPACITY

TEMPERED
GLASS
COVER

320W
POWER

- 3 Heat Settings: Warm, Low, High
- Anti-slip Rubber Footing
- LCD Timer Display
- Ceramic Pot
- With Delay Time

FOR HOUSEHOLD USE ONLY

ISC-601DS

SPECIFICATION:

MODEL NO.	:	ISC-601DS
POWER CONSUMPTION	:	320W
RATED VOLTAGE	:	230Va.c. 60Hz
CAPACITY	:	6 Quarts
BOX DIMENSION	:	380*325*285mm
UNIT DIMENSION	:	385*290*308mm
GROSS WEIGHT	:	5.96kg
UNIT WEIGHT	:	5.44kg

IMPORTANT SAFEGUARDS:

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions carefully.
2. Before using the unit, check if the voltage indicated corresponds with the convenience outlet (230Va.c.).
3. Do not use a two-way socket with another appliance.
4. Do not use any appliance with a damaged cord or plug. If the cord is damaged it should be replaced with the same type and size or bring the unit to the nearest authorized service center.
5. Do not place the unit near a gas stove, an electric burner or in a heated oven.
6. Place the unit on a stable surface; keep it away from the edge of the counter to avoid accidents.
7. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliances by a person responsible for their safety.
8. Children should be supervised to ensure that they do not play with the appliance.
9. Extreme caution must be exercised when using an appliance containing hot water or liquids in the cooker when cooking.
10. Do not allow the cord to touch the hot surface of the unit.
11. For protection against electric shock, do not immerse the unit in water or any other liquids.
12. Always ensure that the lid is closed and do not lift while cooking. Scalding may occur if the lid is removed during the cooking process. Do not touch the hot surfaces of the appliance.
13. Allow the unit to cool down before cleaning.
14. Not intended for outdoor use.
15. Never place the appliance near hot surfaces.
16. No parts are dishwasher safe.
17. Do not exceed into the maximum capacity, if the appliance is overfilled the water or liquid may come out due to cooking food is above the maximum capacity.
18. Carry or move the appliance only by its handle.
19. In case of malfunctions, please bring the appliance to the nearest Authorized Imarflex Service Center.
20. Avoid water spillage into the socket, connector, cord and alike.
21. Appliance body may get very hot, be careful when handling.
22. Do not use the appliance if the pot is damaged or has cracked.
23. Use of accessories or equipment not supplied by the manufacturer may cause damage or malfunctioning of your appliance or result in injuries.
24. **For household use only, not intended for any business purposes.**
25. Do not use this unit other than its intended use.
26. CAUTION: In order to avoid a hazard due to inadvertent resetting of the thermal cutout, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.

DESCRIPTION OF PARTS:



HOW TO USE:

1. Place the unit onto a flat and stable surface.
2. Lift the glass cover.
3. Put the ingredients on the pot.
4. Wipe the sides and bottom part of the pot with a dry cloth.
5. Place the pot inside the unit.
Note: Do not use the unit if the pot is damaged or has cracked.
6. Put the cover on the top of the pot.
7. Plug the unit into a convenience outlet. A beep sound will be heard.
8. Press the ON/OFF button. The display will show 4:00 and cooking & high light indicators will be flashing.
9. Select the desired settings by rotating the knob. The slow cooker has 3 settings.

Setting	Cooking Time	Temperature Range
High	4 hours	96°C - 99°C
Low	6 hours	90°C - 95°C
Keep Warm	6 hours	60°C - 70°C

HIGH SETTINGS

1. Press the ON/OFF button. The default function is 'High'.
2. The display will show 4:00 and cooking & high light indicators will be flashing.
3. Press the knob control to set the desired time.
4. The default time is 4:00 and can be set from 00:30 to 16:00. Rotate the knob to adjust time.
5. After time setting, press the knob control to start the cooking process.
6. The digital display and light indicators will be solid indicating that the cooking is in progress.

LOW SETTINGS

1. For the 'Low' mode, rotate the knob **once**.
2. The display will show 6:00 and cooking & low light indicators will be flashing.
3. Press the knob control to set the desired time.
4. The default time is 6:00 and can be set from 00:30 to 16:00. Rotate the knob to adjust time.
5. After time setting, press the knob control to start the cooking process.
6. The digital display and light indicators will be solid indicating that the cooking is in progress.

WARM SETTINGS

1. For the 'Warm' mode, rotate the knob **twice**.
2. The display will show 6:00 and cooking & warm light indicators will be flashing.
3. Press the knob control to set the desired time.
4. The default time is 6:00 and can be set from 00:30 to 16:00. Rotate the knob to adjust time.
5. After time setting, press the knob control to start the cooking process.
6. The digital display and light indicators will be solid indicating that the cooking is in progress.

Auto Shut-Off Feature

1. Once the set setting is reached, the unit will turn to 'Warm' setting. The heater will automatically shut-off if not unplugged after 6 hours.
2. Unplug every after use.

DELAY TIME

1. Press the ON/OFF button then press DELAY TIME button. The display will show 1:00 and delay light indicator will be flashing.
2. The default time is 1:00 and can be set from 00:30 to 16:00. Rotate the knob to adjust time.
3. Press the knob control to set the desired time.
4. Select the desired setting (Low, High, Warm) by rotating the knob control.
5. Press the knob to select the desired setting.
6. Desired setting light indicator will be steady and cooking light indicator will be flashing.
7. Rotate the knob to adjust the desired time.
8. After time setting, press the knob control to start the process.
9. The digital display and light indicators will be solid indicating that the program - delay time and setting are in progress.

CLEANING AND MAINTENANCE

1. Always unplug the appliance after use and allow the appliance to cool down completely before cleaning.
2. Do not use a metal scoop because the inner pot may get damaged.
3. Do not use abrasive sponges, scouring pads, or stiff brushes to clean the appliance. The pot, and glass lid may be cleaned with mild soapy water using sponge of soft cloth.
4. Wipe the exterior surfaces and outer pot with damp cloth.

Note: Do not immerse the unit in water or any other liquids.

CAUTION:

When cleaning, avoid using thinner, abrasives, and/or metal scrub brush. These may cause discoloration or damage to the unit.

REMINDER: Please do not forget to fill up and send the warranty card with receipt to our email address imarflexfb@evergoodinc.com

Distributed By: Xelframe Enterprises Inc.
Unit 711 IPI Buendia Tower Condo 501, Gil Puyat Ave., Pasay
Made in China

