

SELF-CLEAN Feature:

1. After hair drying or styling, turn off the unit then long press the HEAT BUTTON for approximately 5 to 7 seconds to start the self-clean feature. The green light will be flashing indicating that the unit is in self-clean mode.
2. The unit will automatically stop after the self-clean cycle.

CLEANING AND MAINTENANCE:

- Make sure to clean the air inlets and outlets to prevent blockages that may cause overheating.
 - The hair styler must be cleaned at least once a month
1. Make sure to turn off the unit and unplug the hair styler from the convenience outlet.
 2. Clean the air outlet.
 3. To clean the air inlet, remove the filter cover then remove the hair and dust in the filter.
 4. Re-attach the filter and ensure that the groove of the connector and the projection of the filter are in line.

REMINDER: Please do not forget to register your product warranty through the warranty registration website at <https://imarflex.ph>



SCAN ME

Distributed by:
Xelframe Enterprises Inc.

Unit 711 IPI Buendia Tower Condo 501, Gil Puyat Ave.,
Pasay
Made in China

imarflex®

4 in 1 AIR CURLER MULTI-STYLER



2in1 Hair Dryer & Styling Wand

HIGH SPEED
BLDC MOTOR
110,000 RPM

- Ionic Haircare System
- ◆ Self-clean Function
- ✱ Cool-shot Feature
- ≈ 2 Heat Settings
- ⚡ 1500W Power

360° Free Swivel Power Cord
Built-in Air Filter
Removable Air Filter Cover
LED Light Indicator



FOR HOUSEHOLD USE ONLY

IHS-9204BC

SPECIFICATION:

MODEL NO.	:	IHS-9204BC
VOLTAGE	:	230Va.c.
POWER	:	1500W
BOX DIMENSION	:	356.5*281.5*90mm
UNIT DIMENSION	:	348.5*45.6*48mm
GROSS WEIGHT	:	1772.9g
UNIT WEIGHT	:	918.7g.

IMPORTANT SAFEGUARD:

1. Read all instructions carefully.
2. Before using the unit, check if the voltage indicated corresponds with the convenience outlet (230Va.c.).
3. Do not use two-way socket with another appliance.
4. Do not place or store this appliance where it can fall or be pulled into a tub or sink.
5. Do not place or drop into water or other liquid.
6. Do not place the heated unit directly on any surface while it is hot or plugged in.
7. Always store this appliance and cord in a moisture-free area. Do not store it in temperatures exceeding 140°F (60°C).
8. This appliance is for household use only.
9. Do not plug or unplug this appliance when your hands are wet.
10. Close supervision is necessary when this appliance is used by, on, or near children or invalids.
11. Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by manufacturer.
12. Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or if it has been dropped into water. Return the appliance to the nearest Imarflex Service Center for examination and repair.
13. Keep the cord away from the heated surfaces. Do not wrap the cord around the appliance.
14. This appliance is hot when in use. Do not let eyes or bare skin touch heated surfaces.

DESCRIPTION OF PARTS:



HOW TO USE:

1. Ensure that the switch is set to OFF position before plugging the unit into the convenience outlet.
2. Select the desired attachment.
 - a. Round Brush – Lift, volume and soft curls
 - b. Air Curler – Auto curler
 - c. Straightening Brush – Straightens the hair
 - d. Leafless Nozzle – Natural hair drying
3. Set the desired heat setting.
 - a. High - For drying hair
 - b. Low - For hair styling
4. If the unit stop, turn OFF the unit and let it cool down.

UNIT CONTROL:

I	-	Power On
O	-	Power Off
HEAT	-	Heat selector button
Green Light	-	Cold air with high-speed setting
Yellow Light	-	Hot air with low-speed setting
Red Light	-	Hot air with high-speed setting