

imarflex
COMMERCIAL
INDUCTION COOKER



20KG
HEAVY DUTY

HIGH
POWER OUTPUT
2500W for **FASTER COOKING**

Up to 30cm
Cookware

SS Stainless Steel
Housing

Child-lock
Feature

- 10 Power Level Settings
- 10 Temperature Level Settings
from 80°C to 240°C

- Up to 4-hour Timer
- High Energy Efficiency
- Overload protection

FOR HOUSEHOLD USE ONLY

IDX-2530CM

SPECIFICATION:

MODEL NO.	:	IDX-2530CM
RATED VOLTAGE	:	230Va.c. 60Hz
POWER CONSUMPTION	:	2500 Watts
BOX DIMENSION	:	363x425x100mm
UNIT DIMENSION	:	320x390x75mm
GROSS WEIGHT	:	3.61kgs
UNIT WEIGHT	:	3.23kgs

IMPORTANT SAFEGUARD:


When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions carefully.
2. Do not use the Induction Cooker on any metal table.
3. Do not use the Induction Cooker next to devices, which react sensitively to magnet (e.g. radios, TV, cassette recorders, etc.).
4. Keep curtains, furniture, flammable materials, etc. away from the Induction Cooker and from the convenience outlet where the Induction Cooker is plugged.
5. Before using the Induction Cooker, check if the voltage indicated corresponds with the convenience outlet (230Va.c.)
6. Do not use any appliance with a damaged cord or plug. If the cord is damaged it should be replaced with the same type and size or bring the Induction Cooker to the nearest Authorized Service Center.
7. Do not use the two-way socket with another appliance.
8. Do not place the unit near gas stove, an electric burner, in heated oven or near any hot surface.
9. Do not touch the Induction Cooker and the power plug with wet hands.
10. Do not block the ventilation slots of the Induction Cooker. Keep a minimum distance of 10cm to 20cm away from the wall or from other items.
11. The Induction Cooker's surface is made of glass, if damaged, unplug immediately.
12. Do not insert objects like wires or tools into the ventilation slots, this may cause electric shocks.
13. Do not allow the cord to touch the hot surface of the unit.
14. The Induction Cooker does not heat up during cooking, but the heat from the cookware can be transferred to in the Induction Cooker. Do not touch the hot surface of the glass.
15. Scientific tests have proven that Induction Cookers are safe to use. However, persons with a pacemaker should keep a minimum distance of 60cm from the unit while using.
16. Do not place any metal kitchen utensils, pan lids, knives or other metal objects on the cooker. These may heat up when the Induction Cooker is turned on.
17. Do not place any magnetic objects on the glass surface while the Induction Cooker is in use.
18. To protect against electric shock, do not immerse the Induction Cooker in water.
19. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliances by person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
20. This induction cooker is intended for tabletop use only.
21. Do not use the Induction Cooker for other than intended use.
22. Not intended for outdoor use.
23. For household use only, not intended for any business purposes.

24. **Save this instruction for future references.**

25. **CAUTION:** In order to avoid a hazard due to inadvertent resetting of the thermal cutout, this appliance must not be supplied through an external switching device, such as timer, or connected to a circuit that is regularly switched on and off by the utility.

DESCRIPTION OF PARTS:

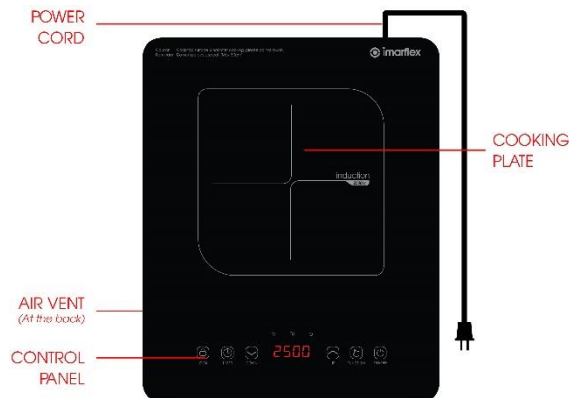

OPERATING PRINCIPLE:

Induction Cooker applies the heating principle of the magnetic field inducing the whorl electric current. It utilizes the magnetic field produced by the current passing the loop when the magnetic force line passes the bottom of the stainless-steel cookware. It produces numberless whorl electric current that will heat up the stainless-steel cookware rapidly. This process is extremely efficient and minimizes the use of electricity.

The Imarflex Induction Cooker automatically detects if the cookware is induction-ready.

SUITABLE COOKWARES:

- Magnetized stainless steel and cast iron
- Acceptable pot diameter is 12cm-30cm

NOTE: FOR OPTIMAL PERFORMANCE AND EFFICIENCY, USE POTS THAT ARE WITHIN THE SIZE OF THE CIRCULAR PRINT ON THE INDUCTION PLATE.

UNSUITABLE COOKWARES:

- Non-magnetized stainless steel, aluminum, plastic, glass and Porcelain.

CAUTION:

- Do not leave an empty cookware with the Induction Cooker ON
- When STIR-FRYING with little oil in the pot, don't overheat the oil, otherwise it will kindle easily
- When FRYING, the volume of the oil in the pot should be not less than 0.9 liter since little oil might burn easily

CONTROL PANEL:



HOW TO USE

1. Connect to Power - Plug the unit into a convenient power outlet. A beep will sound, and the display will flash "- - -", indicating the unit is powered on.
2. Enter Standby Mode - Press the "ON/OFF" button. A beep will sound, and the display will show "ON", placing the unit in standby mode.
3. Place Cookware - Center induction-ready cookware on the induction plate for accurate heating.
4. Adjust Power Setting - Press the "Function" button once. The display will show 1600, the default power level (1600W). Use the "+" and "-" buttons to adjust the power between 200W and 2500W.
5. Adjust Temperature Setting - Press the "Function" button twice. The display will show 240°C, the default temperature. Use the "+" and "-" buttons to adjust the temperature from 60°C to 240°C.
Note: It is recommended to use power mode for boiling and temperature mode for frying.
6. Set Timer (Optional) - After selecting your desired function, press the "Timer" button. The display will show "0:00", and the timer indicator will light up. Set a time between 1 minute (0:01) and 4 hours (4:00).
7. Activate Child Lock - Press the "Lock" button to lock all settings. The lock indicator will light up. While locked, the induction cooker will not respond to any key presses.
8. To unlock, press and hold the "Lock" button for 3 to 5 seconds.
9. Turn Off After Use - Press the "ON/OFF" button to return the unit to sleep mode. Make sure the unit fan stops completely before unplugging the unit.
10. Unplug the Unit - Always unplug the cooker from the power outlet after use for safety.

CLEANING AND MAINTENANCE

1. Allow the unit to cool completely before cleaning.
2. Ensure the cooker is turned off and unplugged.
3. Use a suitable mild detergent to remove any dirt or residue.
4. Wipe the surface with a clean, damp cloth after cleaning.
5. Do not immerse the unit in water or any other liquid.
6. Always clean the cooking plate and pan before each use to prevent buildup and discoloration from burnt residue.
7. Clean the air vent and intake using a vacuum or cotton swab. If oily dirt is present, use a soft toothbrush with a small amount of detergent. Never use water or liquid to clean internal components.
8. Avoid caustic or harsh cleaning agents, which can chemically damage the unit.

9. Do not use benzene, paint thinner, abrasive brushes, or polishing powders as these may damage the surface of the cooker.

TROUBLESHOOTING:

PROBLEM	POSSIBLE CAUSE	RECOMMENDATION
No Power Indicator	<ul style="list-style-type: none">• Power cord not properly plugged	<ul style="list-style-type: none">• Ensure the power cord is securely connected to the outlet
Automatically switched off	<ul style="list-style-type: none">• Overload Protection• No operation for more than 2 hours	<ul style="list-style-type: none">• Unplug the unit, wait for about 2 minutes, then plug it back in• Contact the nearest Imarflex Service Center
E0	<ul style="list-style-type: none">• Incompatible cookware• Cookware diameter less than 12cm (bottom)• Cookware not centered on the cooking plate	<ul style="list-style-type: none">• Use induction-ready cookware made of pure stainless steel• Ensure the pot has at least a 12 cm base• Place the pot in the center of the cooking plate
E1/E2	<ul style="list-style-type: none">• Voltage is too low or too high	<ul style="list-style-type: none">• Unplug the unit, wait 2 minutes, then reconnect to power
E3	<ul style="list-style-type: none">• Sensor malfunction (open or short circuit)	<ul style="list-style-type: none">• Contact the nearest Imarflex Service Center
E4	<ul style="list-style-type: none">• Top Plate Sensor Open Circuit or without connect	<ul style="list-style-type: none">• Contact the nearest Imarflex Service Center
E5	<ul style="list-style-type: none">• Cooking plate temperature exceeds 280°C• IGBT Sensor Overheat or Short Circuit or Fan without connect	<ul style="list-style-type: none">• Allow the unit to cool for a few minutes• If issue persists, contact the nearest Imarflex Service Center
E6	<ul style="list-style-type: none">• IGBT Sensor Open Circuit	<ul style="list-style-type: none">• If problem continues, contact the nearest Imarflex Service Center

REMINDER: Please do not forget to register your product warranty through the warranty registration website at <https://imarflex.ph>



Distributed by:
Topgadget Distributions, Inc.
2120 A. Inao St., Malate, Manila
Made in China