SPECIFICATION:

MODEL NO.	:	IRW-9200S
RATED VOLTAGE	:	230Va.c. 60Hz
POWER CONSUMPTION	:	140 Watts
BOX DIMENSION	:	488x488x427mm
UNIT DIMENSION	:	480x410x375mm
GROSS WEIGHT	:	9.2kg
UNIT WEIGHT	:	7.26kg


IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury, including the following:

- 1. Read all instructions carefully before use.
- 2. Before plugging in the unit, ensure that the voltage rating (230Va.c.) matches your power outlet.
- 3. Do not use a two-way socket or extension cord with other appliances.
- 4. Do not operate the appliance if the power cord or plug is damaged. If damaged, it must be replaced with an identical type or serviced at the nearest authorized Imarflex Service Center.
- 5. Do not place the unit near gas stoves, electric burners, or inside heated ovens.
- 6. Always place the unit on a stable, flat surface. Keep it away from counter edges to prevent accidental tipping.
- 7. If the appliance malfunctions, bring it to the nearest Imarflex Customer Service Center for inspection or repair.
- 8. Plug the power cord firmly into the outlet. Avoid using multi-socket adaptors or plugging in multiple appliances.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or those lacking experience and knowledge, unless supervised or instructed by someone responsible for their safety.
- 10. Children must be supervised to ensure they do not play with the appliance.
- 11. To avoid electric shock, do not immerse the unit, plug, or cord in water or any other liquid.
- 12. Allow the unit to cool completely before cleaning.
- 13. This appliance is for indoor use only.
- 14. Do not exceed the maximum capacity of 20L or 50 cups.
- 15. Keep curtains, furniture, and other flammable materials away from the unit.
- 16. Do not place the appliance on or near gas or electric stoves.
- 17. Use the rice warmer only with the supplied inner pot. Do not use the inner pot for other cooking purposes.
- 18. Always carry or move the rice warmer using its handle.
- 19. Prevent water from spilling into the socket, connector, power cord, or surrounding areas.
- 20. Do not place the inner pot over direct flame.
- 21. Keep the power cord away from the hot surfaces of the rice cooker.
- 22. Do not wrap or loop the cord around the unit after use.

- 23. Store the rice warmer in a dry, cool place.
- 24. Use the appliance only for its intended purpose.
- 25. Retain this instruction manual for future reference.

DESCRIPTION OF PARTS:

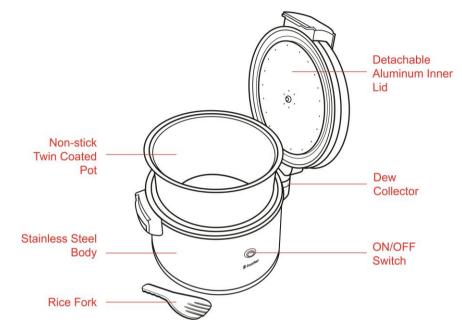

HOW TO USE:

- 1. Connect the appliance to a 230Va.c. power outlet.
- 2. Transfer the cooked rice into the inner pot and close the lid firmly until it locks in place.
- Turn on the unit by switching the ON/OFF switch to the "ON" position.
- 4. After each use, make sure to unplug the appliance from the power outlet.

CLEANING AND MAINTENANCE

- 1. Always unplug the unit before cleaning, and allow it to cool completely. Never clean the unit while it is still hot.
- 2. To prevent electrical hazards, do not immerse the unit or power cord in water or any other liquid.
- 3. The inner pot, dew collector, and spatula can be washed with mild soap and water.
- 4. Keep the bottom of the inner pot and the heater plate clean at all times.
- 5. Wipe the exterior of the unit with a damp cloth.

- 6. Never immerse the unit in water or any liquid.
- 7. The inner pot is non-stick coated; avoid using abrasive cleaners or tools. Use only the provided spatula to prevent scratching.
- 8. Remove any grains of rice or residue from the heater plate to ensure proper operation.

REMINDER: Please do not forget to register your product warranty through the warranty registration website at https://imarflex.ph



Distributed By: Evergood Unlimited Corp. 901 G.Masangkay St., Manila Made in China



HEAVY DUTY COMMERCIAL RICE WARMER

