







1. Always set the temperature control knob to MIN before plugging in or unplugging the power cord.
  - a. Do not remove the iron from the base yet.
  - b. Wait until the indicator lamp turns off, indicating readiness.
2. Remove the iron from the base station and begin ironing.
3. If you pause or stop, place the iron back on the base station.
  - a. The iron will automatically begin reheating.

NOTE: Cordless ironing is only possible for short periods. When performance decreases, return the iron to the base to recharge. The indicator lamp will switch on during heating and off when ready.

TABLE GUIDE:

Symbol	Fabric	Temp.	Variable steam	Steam Burst	Water Spray
	Nylon		X	X	✓
	Silk Wool		✓	X	✓
	Cotton Linen	 MAX	✓	✓	✓

#### CLEANING AND MAINTENANCE

1. Unplug the iron after every use.
2. Allow the iron to cool OFF.
3. Wipe the soleplate with soft damp cloth.
4. From time to time clean the water tank by filling it with water and shake well, and then discard the water.
5. Never leave the water inside the water tank for long period of time.

#### SELF-CLEAN FUNCTION

1. Fill water through the water inlet (half-full). Press down the cover.
2. Plug into the convenience outlet. Make sure that the variable steam selector is in "o" position.
3. Set the thermostat control knob to max temperature, power light indicator will turn ON.
4. Once the power light indicator turns OFF, unplug the unit, bring to the sink and press the SELF-CLEAN button. Water steam will come out from the soleplate holes while impurities and flakes flushed out.
5. Release the button as soon as the water from the water tank evaporates.

REMINDER: Please do not forget to register your product warranty through the warranty registration website at <https://imarflex.ph>



Distributed By: Evergood Unlimited Corp.  
901 G.Masangkay St., Manila  
Made in China



## 2in1 CORDLESS STEAM IRON



Self-clean



Nozzle Spray



Steam Burst



Cordless

- Pilot Light Indicator
- 360° Pivoting Cord
- Spray and Steam Button
- Ceramic Sole Plate
- 380ml Water Tank Capacity
- 2200W Power

FOR HOUSEHOLD USE ONLY

IRS-620CW

## **SPECIFICATION:**

Model No	:	IRS-620CW
Input Voltage	:	230 Va.c. 60Hz
Power	:	2200W
Box Dimension	:	336x141x163mm
Unit Dimension	:	314x137x155mm
Gross Weight	:	1.85kg
Unit Weight	:	1.35kg

## **IMPORTANT SAFEGUARDS:**

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instruction carefully.
2. Before using the unit, check if the voltage indicated corresponds with convenience outlet (230Va.c.).
3. Do not use any appliance with a damaged cord or plug. If the cord is damaged it should be replaced with the same type and size or bring the unit to the nearest authorized service center.
4. Do not leave the iron unattended while it is connected to the convenience outlet.
5. Children should be supervised to ensure that they do not play with the appliance.
6. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliances by a person responsible for their safety.
7. Do not use two-way socket with another appliance.
8. To protect against electric shock, do not immerse the iron in water.
9. Unplug the iron when filling with water; emptying the tank or after using the iron.
10. The iron should always be turned OFF before plugging or unplugging from the outlet.
11. Do not allow cord to touch hot surface of the iron. Loop cord loosely around the iron before storing.
12. **For household use only; not intended for any business purposes**
13. Save this instruction for future reference.

## **DESCRIPTION OF PARTS:**



 
### **Control Features**

1. **Steam Burst** - Switch to this setting to release a powerful burst of steam—ideal for eliminating stubborn wrinkles.
2. **Spray Button** - Press to release a fine mist that helps dampen difficult-to-iron fabrics.
3. **Steam Selector** - Slide this button to adjust the continuous steam output. The "O" position indicates dry ironing (no steam).
4. **Water Tank** - Used to fill the iron's water reservoir.
5. **Nozzle Spray** - Directs the water mist when the spray button is pressed.
6. **Heat Selector Knob** - Turn to select the appropriate temperature for different fabric types.

## **Before First Use**

1. Remove the protective cover from the soleplate.
2. Set the iron to maximum temperature and iron a piece of damp cloth for several minutes. This process helps remove any manufacturing residue from the soleplate.

**Note:** It is normal for the iron to emit a slight odor during initial use. This will dissipate after a few uses.



## **Using as Dry Iron:**

1. Plug the iron to the convenience outlet.
2. Set thermostat control knob at desired temperature setting (see table guide).
3. Allow the iron to heat for two minutes on heel rest position before ironing.
4. The power light indicator will turn ON when the iron is switch ON, the power light indicator will turn OFF once the temperature has been attained. The power light indicator will remain OFF as long as the iron keeps the selected temperature, as the temperature decreases, the thermostat will start working; the power light indicator will turn ON again.
5. First, iron synthetic fabric at low temperature, and then as the temperature rises, iron wool, cotton, and linen accordingly. The iron heats more quickly than it cool.
6. Allow time for the iron to heat when changing from a low temperature to high.

## **Using as Steam Iron**

1. At ironing position, fill water through the water inlet. Make sure that the water should not exceed the MAX level indicator (380ml). Press down the cover.
2. Plug into the convenience outlet and turn thermostat control knob to desired temperature setting. Position the unit on a heel rest position.
3. Set the variable steam selector to desire steam output and begin ironing.
  - a. Use steam burst control for intermittent steam, or
  - b. Use spray button for water spray.
4. The iron has an anti-drip function: while ironing for an extended period, soleplate temperature will drop, the iron will automatically stop the water from coming out, thus, no water droplets will come-out of the soleplate.
5. Steam Burst can also be used when holding the iron in a vertical position.
6. After use, discard the remaining water from the water tank.

## **Cordless Ironing**

Before you start ironing, allow the iron to heat up briefly.

1. Fully unwind the power cable.
2. Place the iron securely on the base station.
3. Set the temperature control knob to MIN.
4. Plug the power cord into a convenience outlet.
5. Turn the temperature control knob to your desired setting.
  - a. The selected setting is indicated in front of the knob.
  - b. The indicator lamp will light up while the soleplate heats.

**NOTE:** When the indicator lamp switches off, the soleplate has reached the desired temperature. The iron will reheat automatically when the temperature drops—indicated by the lamp turning on again.

## **Setting Up the Base Station**

1. Place the base station on a sturdy, level, and vibration-free surface.
2. Position the iron upright on the base station.
  - a. Ensure the handle faces the power cord.
  - b. The iron must fit securely and correctly.
3. Lock the iron into place using the Lock/Unlock switch.

## **Removing the Iron from the Base Station**

1. Switch the Lock/Unlock switch to the Unlock position.
2. Carefully lift the iron off the base station.

## **Ironing Cordlessly**

To maximize cordless usage, use the steam shot function sparingly. For energy savings, you may also set the steam selector to no steam.