





TABLE GUIDE:

ICON	SETTING	FABRIC	TEMPERATURE
 Nylon	Dry Iron	Nylon	Low
 Silk Wool	Steam Iron	Silk & Wool	Medium
 Cotton Linen	Steam Iron	Cotton & Linen	High
 Steam	Continuous Steam	Applicable for Silk & Wool Cotton & Linen	Medium & High

CLEANING AND MAINTENANCE

1. Always unplug the appliance after every use.
2. After each use, drain any remaining water from the tank to help prevent limescale buildup.
3. To clean surface limescale or dust, use a soft cloth dampened with a solution of 15% white vinegar and 85% water, and gently wipe the affected areas.
4. If you notice a decrease in steam output, fill the water tank with the vinegar solution and let it sit for about 40 minutes. Then shake out the liquid, refill the tank with clean water, and repeat the process a few times to thoroughly remove any limescale buildup.

REMEMBER: Please do not forget to register your product warranty through the warranty registration website at <https://imarflex.ph>



Distributed By: Evergood Unlimited Corp.
901 G.Masangkay St., Manila
Made in China



2in1 PORTABLE STEAM IRON

Nylon • Silk • Wool • Cotton • Linen



3-heat Settings



Touch Control



105ml Water Tank Capacity



Panel Light Indicator

• Heat insulated Base • Teflex Coated Sole Plate • 1500W Power

FOR HOUSEHOLD USE ONLY

IRS-650RT

SPECIFICATION:

Model No	:	IRS-650RT
Input Voltage	:	230 Va.c. 60Hz
Power	:	1500W
Box Dimension	:	323x160x110mm
Unit Dimension	:	294x88x113mm
Gross Weight	:	0.96kg
Unit Weight	:	0.74kg

IMPORTANT SAFEGUARDS:

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instruction carefully.
2. Before using the unit, check if the voltage indicated corresponds with convenience outlet (230Va.c.).
3. Do not use any appliance with a damaged cord or plug. If the cord is damaged it should be replaced with the same type and size or bring the unit to the nearest authorized service center.
4. Do not leave the iron unattended while it is connected to the convenience outlet.
5. Children should be supervised to ensure that they do not play with the appliance.
6. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliances by a person responsible for their safety.
7. Do not use two-way socket with another appliance.
8. To protect against electric shock, do not immerse the iron in water.
9. Unplug the iron when filling with water; emptying the tank or after using the iron.
10. The iron should always be turned OFF before plugging or unplugging from the outlet.
11. Do not allow cord to touch hot surface of the iron. Loop cord loosely around the iron before storing.
12. ***For household use only; not intended for any business purposes***
13. Save this instruction for future reference.

DESCRIPTION OF PARTS:




Control Features

1. **Steam**— Press this setting to release a steam—ideal for eliminating stubborn wrinkles.
2. **Water Tank** - Used to fill the iron's water reservoir.
3. **Heat Selector Knob** - Turn to select the appropriate temperature for different fabric types.

Before First Use

1. Remove all packaging materials and stickers from the appliance.
2. Place the unit on a flat, stable, and heat-resistant surface.
3. Hang the garment you intend to steam.
4. Open the water inlet cover and fill the tank with approximately 105ml of clean, distilled, or purified water.
5. Close the inlet cover firmly, then plug in the appliance to start the heating process.

Note: It is normal for the iron to emit a slight odor during initial use. This will dissipate after a few uses.

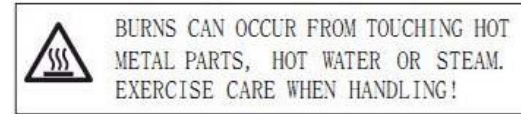



Using as a Dry Iron

1. Plug the iron into a power outlet.
2. All indicator lights will illuminate for one second, then switch to standby mode.
3. Press the power button to turn on the unit.
4. Select the dry iron or nylon setting. The indicator will flash while the iron is heating.
5. Once the light is steady, the iron is ready for use.
Note: The iron heats up faster than it cools down. For best results, start with delicate fabrics and progress to those requiring higher heat.
6. Allow extra time for reheating if adjusting from a lower to a higher temperature setting.

Switching to Steamer Mode

Turn the handle 90° clockwise until you hear a click. This indicates that the iron has successfully switched to steamer mode.

Using as a Steam Iron

1. Open the water inlet cover and fill the tank with approximately 105ml of clean, distilled, or purified water then close the inlet cover firmly.
Note: Do not overfill the water tank. The maximum capacity is **105 ml**.
2. Plug the iron into a power outlet.
3. All indicator lights will illuminate for one second, then switch to standby mode.
4. Press the power button to turn on the unit.
5. Select the desired steam setting:
 - a.  - Low Steam mode for silk and wool.
 - b.  - High Steam mode for cotton and linen.
6. The indicator light will flash while the iron is preheating. Wait until it remains steadily lit before proceeding.
7. Press the steam button to begin steam output.
8. Steam can be used in both horizontal (flat) and vertical (upright) positions.
9. To change modes, press the desired setting button again. If the indicator light is flashing, the appliance is still preheating and not ready for use. Wait until it remains steadily lit before proceeding.
10. Press the steam button to begin steam output.
11. Place the unit in the heat-insulated base when not in use.

