

FOR WARRANTY REGISTRATION PLEASE
CLICK THIS LINK: <https://rb.gy/7b8cmw>

 **imarflex**

COFFEE *MAKER*



FOR HOUSEHOLD USE ONLY

imartec® Corporation

ICM-300

SPECIFICATION

MODEL NO	:	ICM-300
RATED VOLTAGE	:	230Va.c.
60Hz POWER CONSUMPTION	:	600 Watts
BOX DIMENSION	:	21.5*16.5*26.5cm
UNIT DIMENSION	:	22*16*26cm
GROSS WEIGHT	:	1.15 kg.
UNIT WEIGHT	:	0.92 kg.

IMPORTANT SAFEGUARDS:

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions carefully.
2. Before using the coffee maker, check if the voltage indicated corresponds with the electric outlet (230Va.c.).
3. Do not use the two-way socket with other appliances.
4. Do not use any appliance with a damaged cord or plug. If the cord is damaged it should be replaced with the same type and size or bring the unit to the nearest Imarflex authorized service center.
5. Do not use the coffee maker if the water tank is empty.
6. Do not place the coffee maker near gas stove, electric burner, heated oven, or any other hot surface.
7. Keep it away from the edge of the counter to avoid accidents.
8. Children should be supervised to ensure that they do not play with the appliance.
9. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliances by a person responsible for their safety.
10. Extreme caution must be exercised when using an appliance containing hot coffee.
11. Do not allow cord to touch the hot surface of the coffee maker.
12. For protection against electric shock, do not immerse the coffee maker in water or any other liquid.
13. The use of any accessory not recommended by the appliance manufacturer may result in fire, electric shock or injury of the user.
14. Always ensure that the lid is closed and the carafe is properly placed in the unit. Do not lift the carafe while coffee is dripping. Scalding may occur if the carafe is removed during the brewing cycle. Do not touch the hot surfaces of the coffee maker.
15. Avoid placing the carafe on a wet or cold surface especially when hot.
16. Do not use the carafe if it has a crack or the handle is not stable.
17. Do not use the carafe for other purposes.
18. The unit is not intended for outdoor use.
19. Do not use the unit other than its intended use.
20. After use, always switch OFF and unplug the unit from the convenience outlet.
21. Allow the unit to cool down before cleaning.
22. This coffee maker is intended for coffee only. Do not heat any other liquid or attempt to cook any food in this appliance.
23. No parts are dishwasher safe.
24. Do not exceed the "MAX" water level indicator when filling.
25. Coffee maker carafe may get very hot, be careful when handling.
26. Avoid water spillage into the socket, connector, cord and alike.
27. Use on a hard, flat level surface only, to avoid interruption of airflow underneath the appliance.
28. Never use warm or hot water to fill the water tank. Use cold water only.
29. Warning: The filling aperture must not be opened during use.
30. **For household use only, not intended for any business purposes.**
31. Do not use this unit other than its intended use.
32. Save this instruction manual for future reference.

DESCRIPTION OF PARTS:



HOW TO USE:

1. For initial use, wash filter basket and the carafe thoroughly.
2. Plug the unit into a convenience outlet. Always make sure that the unit is in the "OFF" position.
3. Swing out the funnel; place the filter basket holder with the filter basket and make sure that it is properly assembled.
3. Put the ground coffee into the filter basket using a measuring spoon, standard measurement is one scoop of ground coffee (7 to 8 grams) for a cup of water (8oz), but you may also adjust according to your personal taste, and then close the funnel.
4. Fill the carafe with the desired amount of water. Open the lid of the water tank, pour water and close the water tank cover.

Note: Do not fill water tank above the maximum level as indicated on water gauge.

5. Wipe and place the carafe into the keep warm plate.
6. Switch "ON" the unit.
7. During the brewing cycle, the water will automatically drip into the carafe.

Note: The appliance is designed with a pause-and-serve feature, at any time during brewing cycle, you can temporarily remove carafe to pour and serve a cup of hot coffee. The brewing cycle will not be interrupted and no coffee will drip from the unit, simply return the glass carafe onto the warming plate to restart the brewing cycle, but do not remove the glass carafe longer than 30 seconds.

8. After the brewing cycle (coffee stops dripping out), wait for one minute before removing the carafe to serve.

Note: The coffee you get will be less than the water you have poured, as some water is absorbed by the coffee grounds.

Caution: When pouring coffee, make sure that the angle of the carafe does not exceed 45 degrees in reference to the vertical position; you can pour the coffee slowly until the carafe is empty; be careful not to over tilt and spill the hot contents of the carafe. The hot contents of the carafe burn the skin on contact.

9. After brewing, the appliance will automatically switch to the warming mode, which will continue to keep your coffee warm until you press the button to the "O" position. It is suggested that warming time shall be not more than 1 hour; aroma and coffee taste will decrease as long as it is exposed. For the best coffee taste, serve it just after brewing.
10. After use, switch OFF and unplug the unit from the convenience outlet.

Note: Always turn OFF the unit if the carafe is empty.

HINTS FOR GREAT-TASTING COFFEE:

1. A clean coffee maker is essential for making great-tasting coffee. Regularly clean the coffee maker as specified in the "CLEANING AND MAINTENANCE" section.
2. Always use fresh tap water in brewing coffee.
3. Store unused ground coffee in a cool, dry place. After opening a package of ground coffee, store it in an airtight container to maintain its freshness.

4. For the best coffee taste, buy whole coffee beans and finely grind them just before brewing.
5. Do not reuse ground coffee since this will greatly reduce the coffee flavour. Reheating coffee is not recommended as coffee is at its peak flavour after brewing.
6. Clean the coffee maker because over-extraction may cause oiliness. Small Oil droplets on the surface of brewed, black coffee are due to the extraction of oil from the ground coffee.
7. Oiliness may occur more frequently if heavily roasted coffees are used.

CLEANING AND MAINTENANCE:

How to Clean the Water Tank:

1. Pour water on the water tank with one pint vinegar.
2. Put the carafe into the keep warm plate.
3. Switch the unit ON.
4. After one minute switch OFF.
5. Allow the vinegar inside the water tank for at least 30 minutes. Switch ON. The water will flow into the carafe after boiling.
6. Empty carafe and rinse it thoroughly.
7. Pour water on the water tank and repeat brewing cycle.
8. Switch OFF.
9. Wash the carafe once more.

Note: Do not use damp cloth to clean the water tank, this will leave some residue of lint and may clog your coffee maker. Simple rinse with fresh tap waters periodically.

Removing Mineral Deposits on the Water Tank

To keep your coffee maker operating efficiently, periodically clean mineral deposits left by the water according to the water quality in your area and the frequency of use, we recommend removing mineral deposits as follows:

1. Fill the water tank with water and de-scaling solution to the max level as indicated on water gauge (the scale of water and solution is 4:1; the detail refers to the instruction of the solution. Please use "household solution"; you may also use the citric acid instead of the solution (the one hundred parts of water and three parts of citric acid).
2. Insert glass carafe onto the warming plate.
3. Make sure that the filter (without ground coffee) and funnel are assembled properly.
4. Switch the unit ON and allow it to process the de-scaling solution.
5. After processing one-cup solution, switch OFF the appliance.
6. Leave the solution for 15 minutes and repeat steps 3-5.
7. Switch ON the appliance and run off the solution until the water tank is completely empty.
8. Rinse the unit by processing with fresh water at least 3 times.

How to Clean the Keep Warm Plate and the Filter Basket

1. Unplug and allow the unit to cool OFF before cleaning.
2. Wipe the plate with damp cloth and wipe it dry.
3. Wash the filter basket and filter holder with soap and water.

How to Clean the Carafe

1. Make sure that it is completely cool.
2. Wash the carafe using a mild detergent.
3. To remove stains, fill carafe with water and mild soap. Leave these inside the carafe overnight.
4. Rinse the carafe thoroughly.
5. Do not clean with cleansers, steel wool pads, or other abrasive materials.

REMINDER: Please do not forget to register your product warranty through the warranty registration website at <https://imarflex.ph>



Distributed By: Evergood Unlimited Corp.
901 G.Masangkay St., Manila
Made in China