









5. Press  button to turn ON the unit and **AUTO** digital display will be flashing
6. Press  button to select the desired function.
 - Press  button **once** for **AUTO** function. The default time is 50 minutes and it cannot be adjusted. It is 45 minutes UV & Heat and 5 minutes Air Circulation.
 - Press  button **twice** for **DRY** function. The default time is 50 minutes and it cannot be adjusted. It is 45 minutes Heat and 5 minutes Air Circulation.
 - Press  button **three (3) times** for **UV** function. The default time is 35 minutes and it cannot be adjusted. It is 30 minutes UV and 5 minutes Air Circulation.
 - Press  button **four (4) times** for **ANION** function. The default time is 10 minutes and it cannot be adjusted. It is 10 minutes Air Circulation & Anion.
7. The selector digital display will be flashing, then wait for about 3 seconds for the function to start. The selector digital display will be solid and ******* ? ******* will appear on the display.
**Note: To cancel and change the function, press  button for 3 seconds.*
8. When the timer is up, a beep sound will be heard.
9. Press  button for 5 seconds to turn OFF the unit.
10. Unplug the unit from the convenience outlet after every use.
**Note: Do not block the steam vent or touch the heater during or after use.*

CLEANING AND MAINTENANCE:

1. Make sure to unplug the unit before moving or cleaning.
2. Wash the dish rack, storage boxes and dripping tray with soap and water.
3. Wipe the cover and unit body with damp cloth or vacuum clean the bottom of the base.
**Note: Do not immerse the unit with water or any liquid.*
4. Do not wash the unit with diluents, toluene or other solvent solutions.
5. Do not leave the water in the dripping tray for a long period of time.
6. Clean the unit regularly.

REMINDER: Please do not forget to register your product warranty through the warranty registration website at <https://imarflex.ph>



Distributed By: Topgadget Distributions, Inc.
 2120 A. linao St., Malate, Manila
 Made in China

FOR WARRANTY REGISTRATION PLEASE
 CLICK THIS LINK: <https://rb.gy/7b8cmw>

imarflex

UV-3in1 Digital DISH DRYER

Sterilizer & Disinfection Box



Double-end
UV-C
 Germicidal Lamp
 Sterilization Rate 99.9%

air Ionizer
 Circulate fresh air

LED
 DIGITAL DISPLAY

4 PRE-SET FUNCTIONS
 • Auto • Anion • Dry • UV

TOUCH Sensitive CONTROL PANEL

43L CAPACITY

- 80°C Hot Air Circulation
- 11.5" Max Plate Size
- Detachable Stainless Steel Rack
- Heat Resistant Cover
- 4-6 Sets

FOR HOUSEHOLD USE ONLY

imartec® Corporation

DD-586UV


SPECIFICATION:

MODEL NO.	:	DD-586UV
RATED VOLTAGE	:	230Va.c. 60Hz
POWER CONSUMPTION	:	300 Watts
BOX DIMENSION	:	550*440*445mm
UNIT DIMENSION	:	480*375*378mm
GROSS WEIGHT	:	5.5kg
NET WEIGHT	:	4.1kg
INSIDE TEMPERATURE	:	70±10°C

IMPORTANT SAFEGUARDS:

1. Read all instruction carefully.
2. Before using the unit, check if the voltage indicated in this unit corresponds with the convenience outlet (230Va.c.).
3. Do not use any appliance with a damaged cord or plug. If the cord is damaged it should be replaced with the same type and size or bring the unit to the nearest Imarflex Authorized Service Center.
4. Keep curtains, furniture, flammable materials, etc. away from the unit and from the convenience outlet.
5. Children should be supervised to ensure that they do not play with the appliance.
6. This appliance is not intended to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
7. Do not block the steam vent.
8. Do not put anything on top of the Dish Dryer.
9. Do not use the Dish Dryer other than its intended use.
10. To protect against electric shock or short circuit, do not immerse power cord, plug or the unit in water.
11. Do not exceed the maximum plate diameter size (24cm) as it may cause damage to the unit.
12. Maintenance other than cleaning should be performed by a qualified technician from an Imarflex Authorized Service Center.
13. For household use only; not intended for any business purposes.
14. Save this instruction manual for future reference.

DESCRIPTION OF PARTS:

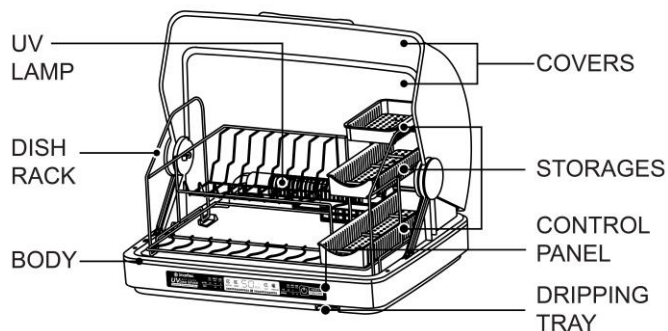

CONTROL PANEL:




PARAMETER TABLE:

FUNCTION	TOTAL TIME (mins.)	UV (mins.)	HEAT (mins.)	AIR (mins.)	ION (mins.)
AUTO	50 mins.	45 mins.	45 mins.	5 mins.	-
DRY	50 mins.	-	45 mins.	5 mins.	-
UV	35 mins.	30 mins.	-	5 mins.	-
ANION	10 mins.	-	-	10 mins.	10 mins.

HOW TO ASSEMBLE:

1. For first time use, remove all packaging materials before use.
2. Make sure to cut all cable ties and remove the plastic sticker located in front of the large storage box of the unit body (on the top of the microswitch).
**Note: Failure to remove the plastic sticker, the unit will not work.*
3. Place the storage boxes accordingly. Refer to the photo below.

- Small Storage Box: **Top**
- Medium Storage Box: **Middle**
- Large Storage Box: **Bottom**

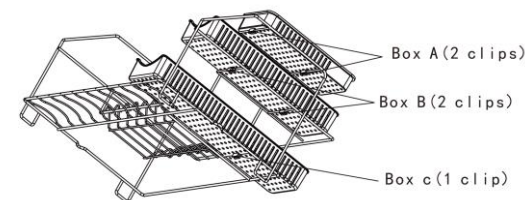

**NOTE: Make sure to properly clip the storage boxes into the Dish Rack.*

4. Insert the Dripping Tray on the bottom of the unit. (Located below the Power/Function button).

HOW TO USE:

1. Assemble the unit properly. Please refer to **(HOW TO ASSEMBLE)**.
2. Place the unit on a flat surface. **The unit needs at least 10 cm clearance space on all sides and at least 30 cm above. This is to allow adequate air circulation. Never place the unit near the stove.**
3. Plug the unit into the convenience outlet. A beep sound will be heard.
4. Put the clean dinnerware, silverware, etc. inside the dish dryer. Then pull down the cover. ***Note: Maximum plate diameter is 24cm only. Do not exceed the maximum plate diameter size (24cm) as it may cause damage to the unit. Do not place any plasticware that is not heat resistant.**