

FOR WARRANTY REGISTRATION PLEASE  
CLICK THIS LINK: <https://rb.gy/7b8cmw>



# CONVECTION OVEN



**21 LITERS**  
CAPACITY

 Insulated Double Glass Door

 Tempered Glass Panel

 Heat Light Indicator

 1300W Power

**PREHEAT FEATURE**

**TEMP : 175°C / TIME : 5 mins.**

FOR HOUSEHOLD USE ONLY

**IT-821CG**

## SPECIFICATION

MODEL NO.	:	IT-821CG
RATED VOLTAGE	:	230Va.c. 60Hz
POWER CONSUMPTION	:	1300W
BOX DIMENSION	:	493*395*331mm
UNIT DIMENSION	:	453*363*297mm
GROSS WEIGHT	:	6.6kg
UNIT WEIGHT	:	7.7kg

## IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions carefully.
2. Before using the oven toaster, check if the voltage indicated corresponds with the convenience outlet (230Va.c.).
3. Do not use two-way socket with another appliance.
4. Do not use any appliance with a damaged cord or plug. If the cord is damaged it should be replaced with the same type and size or bring the unit to the nearest authorized service center.
5. Put the unit on stable surface; keep it away from the edge of counter to avoid accident.
6. Keep curtains, furniture, flammable materials, etc. away from the unit and from the convenience outlet where the unit is plugged in.
7. Do not place the oven toaster near gas stove or electric stove.
8. **The unit needs at least 10 cm clearance space on all sides and at least 30 cm above. This is to allow adequate air circulation.**
9. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliances by a person responsible for their safety.
10. Children should be supervised to ensure that they do not play with the appliance.
11. Do not immerse the unit in water.
12. Do not use this unit other than its intended use.
13. Avoid touching the oven toaster surface while cooking is in progress or even after use. While the oven toaster is in use avoid the glass from getting wet to avoid breakage.
14. Minor metal contraction sound may occur during operation but this is normal.
15. **For household use only; not intended for any business purposes.**
16. In case of malfunctions, please bring the unit to the nearest Authorized Imarflex Service Center.
17. Save this instruction for future reference.

## DESCRIPTION OF PARTS




## CONTROL PANEL

1. **Upper Heater** – It is normally use for top part of the foods, reheating, pizza, broil, etc.
2. **Lower Heater** – Use for baking breads.
3. **Upper + Lower Heater** – Use for grilling meats, seafood, etc.
4. **Convection + Upper Heater** – This setting normally uses for pizza, lasagna, baked mac, etc.
5. **Convection + Both Heater** - this setting is use for baking cakes.

## HOW TO USE

**NOTE: For the first use, preheat the oven toaster for at least 3 to 5 minutes until burnt smell and light smoke is gone. This is to prevent this smell and smoke mix to the food to be cooked.**

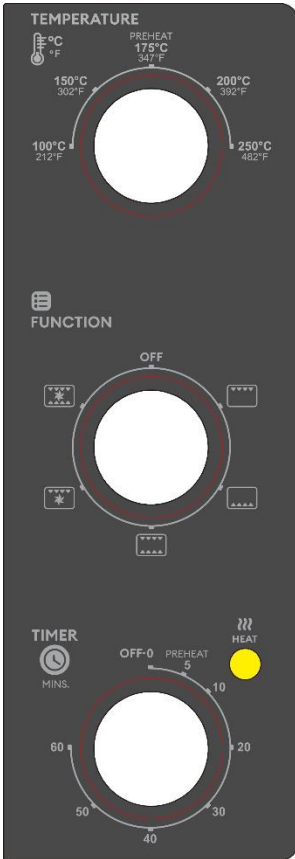

1. Place the unit on flat surface.
2. Check if the timer and heat selector switch is at OFF position before plugging the oven toaster into the convenience outlet.
3. Plug the unit into the convenience outlet.
4. Set the desired temperature.
5. Set the heat selector switch (up, down or all).
6. For baking, use edible oil or butter to keep the food from sticking into the pan and select convection function.
7. Turn the timer to preheat the oven for at least 5 minutes at 175°C or as required by the cooking recipe.

**NOTE: If you need to set the time below 10 minutes, set the timer switch to maximum first then set to desired time setting. The time that been set may not be reach exactly, it may be  $\pm 60$  seconds of the set time.**

8. Place the food on the grill rack or tray and close the door. Be careful when putting food, the unit is hot.
9. Turn the timer switch to desired cooking time.

**NOTE: Cooking time may vary to size and amount of food to be cooked. The result of the cooked food may depend on the amount and size, trial is advisable to get the desired setting and doneness of the food.**

10. A beep sound will be heard and the oven toaster will stop cooking once the set time is finished.

**NOTE: Never turn OFF the Timer Switch forcibly, it may damage the switch. The switch will automatically return to the OFF**

**position even without turning.**

## **CLEANING AND MAINTENANCE**

1. Unplug the unit from the convenience outlet.
2. Allow the unit to cool down before moving or cleaning.
3. Use damp cloth in cleaning the unit.
4. Wash tray, rack, tray handle, skewer and skewer handle with soap and water, let it dry.
5. Do not use abrasive materials to avoid scratches.
6. Always clean the inner part of the unit after every use.

**REMINDER: Please do not forget to register your product warranty through the warranty registration website at <https://imarflex.ph>**



Distributed By: Evergood Unlimited Corp.  
901 G.Masangkay St., Manila  
Made in China