

## **SPECIFICATION**

MODEL NO.	:	IK-517S
RATED VOLTAGE	:	230Va.c. 60Hz
POWER CONSUMPTION	:	2000 Watts
CAPACITY	:	1.7 Liters
BOX DIMENSION	:	216mm*184mm*276mm
UNIT DIMENSION	:	217mm*150mm*280mm
GROSS WEIGHT	:	1.53Kgs
NET WEIGHT	:	1.26Kgs

## **IMPORTANT SAFEGUARDS:**

When using electrical appliances, basic safety precautions should always be followed, including the following.

1. Read all instructions carefully.
2. Before using the unit, check if the voltage indicated corresponds with the convenience outlet (230Va.c.).
3. Do not use a two-way socket with other appliance.
4. Do not use any appliance with a damaged cord or plug. If the cord is damaged it should be replaced with the same type and size or bring the unit to the nearest authorized service center.
5. Do not place the unit near a gas stove, an electric burner or in a heated oven.
6. Place the unit on a stable surface; keep it away from the edge of the counter to avoid accidents.
7. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliances by a person responsible for their safety.
8. Children should be supervised to ensure that they do not play with the appliance.
9. Extreme caution must be exercised when using an appliance containing hot water.
10. Do not allow the cord to touch the hot surface of the unit.
11. For protection against electric shock, do not immerse the unit including the power base in water or any other liquid.
12. Always ensure that the lid is closed and do not lift it while water is boiling. Scalding may occur if the lid is removed during the boiling cycle. Do not touch the hot surfaces of the kettle.
13. Remove the kettle from the power base before filling or pouring. Do not attempt to remove the kettle from the power base until it is switched off, manually or automatically. Use the kettle only with the supplied base. Do not use the base for other purpose.
14. Allow the unit to cool down before cleaning.
15. Not intended for outdoor use.
16. This kettle is intended for boiling water only. Do not heat any other liquid or attempt to cook any food in this appliance.
17. Never place the kettle near hot surfaces.
18. No parts are dishwasher safe.
19. Do not exceed into the "Max" water level indicator when filling, if the kettle is overfilled, boiling water may come out.
20. Do not hold the switch on as this may damage the auto shut-off mechanism.

21. Carry or move the electric kettle only by its handle.
22. Avoid water spillage into the socket, connector, cord and alike.
23. Kettle body may get very hot, be careful when handling.
24. Use on a hard, flat level surface only, to avoid interruption of air flow underneath the appliance.
25. **For household use only, not intended for any business purposes.**
26. Do not use this unit other than its intended use.
27. Save this instruction manual for future reference.

## **DESCRIPTION OF PARTS:**



## **HOW TO USE:**

If you are using the kettle for the first time, it is recommended that you clean your kettle before use, by boiling a full kettle of water twice and then discarding the water.

1. Position the power base on a flat, heat resistant surface, as close as possible to a power outlet.
2. Follow cord routing in power base according to exit patterns. Proper cord routing will result in the power base flat when kettle is placed in base. Do not operate kettle if power base is not flat. If power base is not flat, remove kettle from power base and repeat cord placement instructions.
3. To fill with water, press the lid button to open the lid. Fill the electric kettle with water below the "MAX" water level mark.

**NOTE: Do not exceed the "MAX" water level mark indicated on the electric kettle and make sure to close the lid.**

4. Place the kettle into the power base. Plug the electric cord into an electric outlet. Turn the switch ON by pushing down on the on/off switch. The indicator light will light up indicating that the unit is in progress. The water will heat and the electric kettle will switch off automatically when the water boils.  
**NOTE: Ensure the ON/OFF switch is clear of obstructions and the lid is firmly closed. The electric kettle will not turn off automatically if the ON/OFF switch is constrained.**

5. Carefully lift the kettle from the power base and pour the hot water.
6. The kettle will not re-boil until the on/off switch is switched ON after 25 seconds to allow the kettle to cool down, then it can be switched ON again.

**Note: Maximum capacity of kettle is 1.7L.**

**CLEANING AND MAINTENANCE:**

1. Unplug the unit from the convenience outlet before cleaning.
2. The body of the kettle may be cleaned using a damp cloth. Do not use abrasive materials to avoid scratches.
3. Wash the filter with soap and water.
4. Refer to the instruction below in cleaning the unit using the following:

**• Soap and Water**

- a. Combine soap and water. Pour into the Kettle up to the maximum level for 1 hour.
- b. Discard the solution.
- c. Fill the kettle with clean water up to “max” level and boil.
- d. Repeat several times until the odor of the soap has been removed.
- e. Rinse thoroughly.

**• Vinegar**

- a. Combine one part of vinegar and water. Pour into kettle up to the “max” level Switch ON and wait for the unit to turn OFF.
- b. Leave the solution inside the kettle for overnight.
- c. Discard the solution. Fill the kettle with clean water up to “max” level and boil again.
- d. Repeat several times until the odor of vinegar has been removed.
- e. Rinse the kettle thoroughly.



**REMINDER: Please do not forget to register your product warranty through the warranty registration website at <https://imarflex.ph>**

Distributed By: Sabretech Technology Inc.  
103-113 Sen Gil Puyat Ave. Pasay  
Made in China



# INSULATED ELECTRIC KETTLE



- SUS304 Stainless Steel
- Boil-dry Protection
- Concealed Heating Element
- Cord Storage

**FOR HOUSEHOLD USE ONLY**

**1.7L  
CAPACITY  
IK-517S**