

FOR WARRANTY REGISTRATION PLEASE
CLICK THIS LINK: <https://rb.gy/7b8cmw>

FOR SERVICE CENTERS PLEASE
CLICK THIS LINK: <https://rb.gy/senj28>

imarflex

10in1 DIGITAL MULTI-COOKER



10 Preset Functions

 Ceramic-coated Pot

 Non-stick Outer Coating

1.2L CAPACITY
6 CUPS

- Up to 24-hour Timer
- Timer Display
- 500W Power

FOR HOUSEHOLD USE ONLY

imartec® Corporation

IRM-1206TC

SPECIFICATION:

MODEL NO.	:	IRM-1206TC
POWER CONSUMPTION	:	500W
RATED VOLTAGE	:	230Va.c. 60Hz
BOX DIMENSION	:	325x275x234mm
UNIT DIMENSION	:	272x232x200mm
GROSS WEIGHT	:	2.7 kg
UNIT WEIGHT	:	2.4 kg

IMPORTANT SAFEGUARD:

Read all instructions carefully before use.

1. Read all instructions carefully.
2. Before using the unit, check if the voltage indicated corresponds with the convenience outlet (230Va.c.).
3. Do not use two-way socket with another appliance.
4. Do not use any appliance with a damaged cord or plug. If the cord is damaged it should be replaced with the same type and size or bring the unit to the nearest authorized service center.
5. Do not place the unit near a gas stove, an electric burner, in a heated oven.
6. Place the unit on a stable surface; keep it away from the edge of the counter to avoid accidents.
7. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliances by a person responsible for their safety.
8. Children should be supervised to ensure that they do not play with the appliance.
9. Extreme caution must be exercised when using an appliance containing hot water in the rice cooker when boiling.
10. Do not allow the cord to touch the hot surface of the unit.
11. For protection against electric shock, do not immerse the unit including the power base in water or any other liquid.
12. Always ensure that the lid is closed and do not lift it while the water in the multi-cooker is boiling. Scalding may occur if the lid is removed during the cooking cycle. Do not touch the hot surfaces of the rice cooker.
13. Allow the unit to cool down before cleaning.
14. Not intended for outdoor use.
15. No parts are dishwasher safe.
16. Do not cook food below the recommended minimum level (2 cups) or above the maximum level (6 cups). Boiling water may come out of the rice cooker.
17. Carry or move the multi-cooker only by its handle.
18. In case of malfunction, please bring the rice cooker to the nearest Authorized Imarflex Service Center.
19. Avoid water spillage into the socket, connector, cord and alike.
20. Rice cooker body may get very hot, be careful when handling.
21. Use of accessories or equipment not supplied by the manufacturer may cause damage or malfunctioning of your appliance or result in injuries.
- 22. For household use only, not intended for any business purposes.**
23. Do not use this unit other than its intended use.
24. CAUTION: In order to avoid a hazard due to inadvertent resetting of the thermal cutout, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.

DESCRIPTION OF PARTS:



CONTROL PANEL GUIDE:

FUNCTION	DEFAULT TIME	ADJUSTABLE TIME	TIME DELAY
Fast Cook	----	----	0:30 – 24:00
White Rice	----	----	0:30 – 24:00
Brown Rice	----	----	0:30 – 24:00
Soup	1:30	1:00 – 4:00	0:30 – 24:00
Stew	1:30	0:30 – 2:00	0:30 – 24:00
Porridge	1:00	1:00 – 2:00	0:30 – 24:00
Baby Porridge	1:30	1:00 – 2:30	0:30 – 24:00
Steam	1:00	0:30 – 3:00	0:30 – 24:00
Cake	0:50	0:50 – 1:30	-
Reheat	0:25	0:15 – 1:00	0:30 – 24:00

10 PRESET FUNCTIONS	
Function	Default Time
Fast Cook	----
White Rice	----
Brown Rice	----
Soup	1:30
Stew	1:30
Porridge	1:00
Baby Porridge	1:30
Steam	1:00
Cake	0:50
Reheat	0:25

Step 1

Tap to select function

Step 2

Tap to start cooking process

Cancel / Keep Warm

Tap **CANCEL** **KEEP WARM** to cancel or hold for 2 secs to keep warm

Time Delay Function

- Time Delay allows you to schedule the start of cooking up to 24 hours in advance.
- To Start Cooking Using the Time Delay Function:
 - a. Complete all preparation (add ingredients, water, etc.).
 - b. Connect the unit to the convenience outlet.
 - c. Press the "Function" button and select the desired cooking function.
 - d. Press the "Time Delay" button to enter the delay timer setting mode.
 - e. Use the "Timer" button to set the desired delay time (in 30-minute increments).
 - f. Press the "Start" button to confirm and begin the countdown.
 - g. The unit will automatically start cooking after the preset time delay.

Note: The maximum delay time is 24 hours. The "Cake" function does not support time delay.

Keep Warm Function

- While in standby mode, press and hold the "Keep Warm" button for 2 seconds to activate the keep warm function. The indicator light will turn on and remain steady.
- To cancel the keep warm mode, touch and hold the "Keep Warm" button again for 2 seconds. The unit will return to standby mode.
- When in keep warm mode, pressing the "Keep Warm" button will cancel all settings, terminate the current operation, and return the unit to standby mode.

Note: Use this function to maintain food temperature after cooking or to stop current operations as needed.

HOW TO USE:

1. Plug the unit into the convenience outlet
2. Press "Function" button to select the desired function. The corresponding indicator light on the control panel will turn on as each function is selected.
3. Press "Timer" button once to set the desired time.
4. Press "Start" button to start the cooking cycle.
5. This confirms the selected function and begins heating. The indicator light for the chosen function will remain on during operation.

Tip: Make sure you've selected the correct function and set the desired time before pressing "Start."

CLEANING AND MAINTENANCE:

1. Always unplug the appliance after use and allow the appliance to cool down completely before cleaning.
2. Do not use metal spoons, spatulas or scoopers because the pot may get damaged.
3. Do not use abrasive sponges, scouring pads, or stiff brushes to clean your multi-cooker.
4. The inner pot, may be cleaned with mild soapy water using a sponge or soft cloth then wipe the surface with a damp cloth.

Note: Do not immerse the bottom part of the unit in water or any other liquids.

5. You may clean the steamer with soap and water.
6. Wipe the exterior surfaces with a damp cloth.

Note: Do not immerse the unit and base unit with water or any liquids.